


# ENCON GRAVITY FED EYEWASH TRANSPORT/STATION ASSEMBLY INSTRUCTIONS

## CONTENTS:

- |                      |                            |                          |
|----------------------|----------------------------|--------------------------|
| 1. (1) BASE PLATE    | 7. (1) AXLE ASSEMBLY       | 13. (18) LOCKNUT 1/4-20  |
| 2. (2) LEG FRONT     | 8. (2) LOCKING CASTER      | 14. (4) WASHER 1/2" FLAT |
| 3. (1) SUPPORT UPPER | 9. (2) 8" WHEEL            | 15. (2) COTTER PIN       |
| 4. (2) LEG REAR      | 10.(4) BOLT 1/4-20 X 2-1/2 | 16. (2) AXLE CAP         |
| 5. (1) UPPER FRAME   | 11.(4) BOLT 1/4-20 X 1-1/2 | 17. (2) HAND GRIP        |
| 6. (2) SUPPORT LOWER | 12.(10) BOLT 1/4-20 X 3/4  | 18. (1) DRAIN RECEPTACLE |

## ASSEMBLY:

1. ATTACH AXLE TO BASE PLATE WITH (4) 3/4" BOLTS AND LOCKNUTS AS SHOWN ON EXPLODED SKETCH ON THE BACK OF THIS SHEET.
2. PLACE 1/2" WASHER, THEN 8" WHEEL, 1/2" WASHER, COTTER PIN AND THEN AXLE CAP ON EACH END OF AXLE.
3. TAP CASTERS INTO SOCKETS ON BASE FRONT, BE CAREFUL NOT TO DAMAGE WHEELS.
4. PUSH HANDGRIPS ONTO REAR LEGS
5. ATTACH UPPER SUPPORT TO UPPER FRAME WITH 1-1/2"LONG BOLTS.
6. ATTACH FRONT AND REAR LEGS AND LOWER SUPPORT TO UPPER SUPPORT WITH 2-1/2"BOLTS.
7. CONNECT SUPPORT ASSEMBLY TO BASE WITH 3/4"BOLTS.
8. ATTACH EYEWASH J-HOOK (SUPPLIED WITH EYEWASH) TO UPPER SUPPORT WITH 3/4"BOLTS. USE LOWEST MOUNTING HOLES FOR ENCON GRAVITY FED EYEWASH, MIDDLE HOLES FOR HAWS OR SPEAKMAN,UPPER HOLES FOR FENDALL.
9. PLACE GRAVITY FED EYEWASH AND DRAIN RECEPTACLE ON CART AS SHOWN.

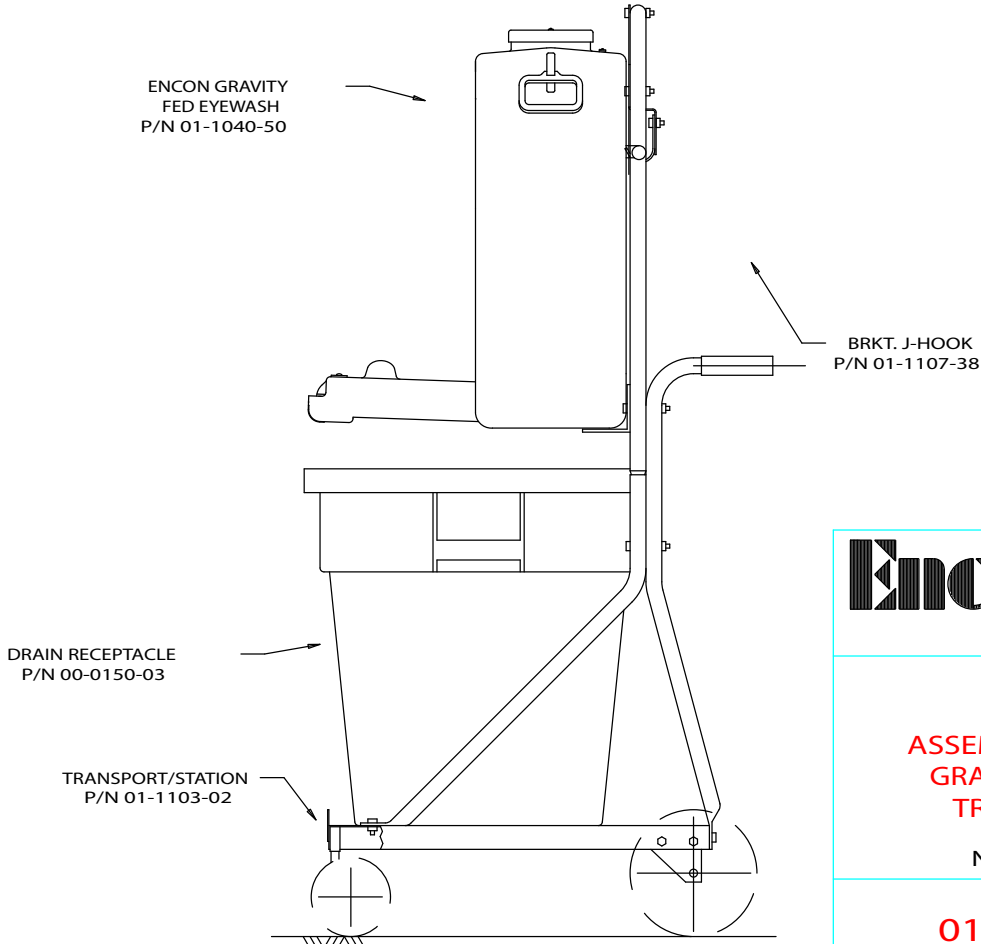

**Encon**

(713) 466-1449

**ASSEMBLY INSTRUCTIONS  
GRAVITY FED EYEWASH  
TRANSPORT/STATION**

NOTE: SCALE = .08333

**01-9999-20**

