

Packing instructions AQ110

1. Place CONNECTOR, NOZZLE 1(01130900) on the long tube as shown in Figure 1. Fill eyewash cartridge.



Fig. 1

2. Attach CONNECTOR, NOZZLE 2 (01130800) to CONNECTOR, NOZZLE 1 as shown in Figure 2.



Fig. 2

3. Place assembly into BAG 22" x 30" (01130702)
4. Secure CLIP, RETAINER (01132100) to NOZZLE ASSEMBLY (01133700) as shown in Figure 3.

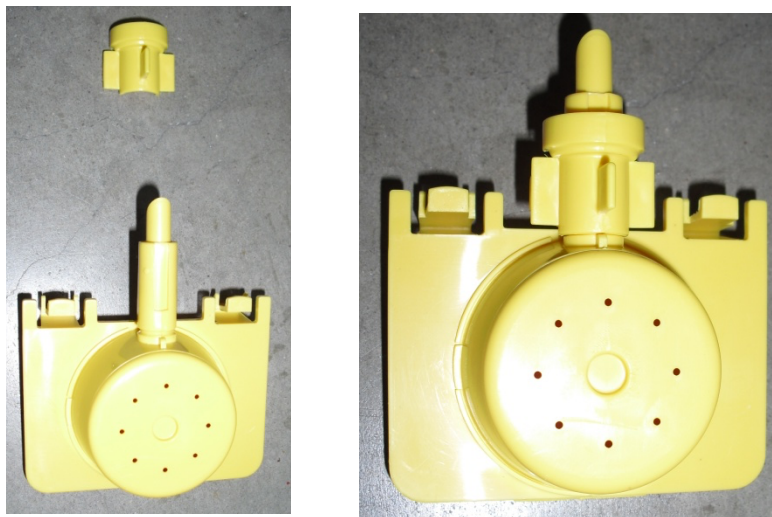


Fig3.

5. Using tape or a zip tie, tie off the NOZZLE ASSEMBLY (loosely placed on CONNECTOR, NOZZLE 1) as shown in Figure 4.



Fig. 4

6. Place the INSTRUCTION SHT (01999972), TAG (01134300), SEAL PULL TITE (01112391), & CAP ROUND VINYL (01130701) in bag as shown in Figure 5.
7. Place all parts in shipping box and attach LABEL DO NOT USE BLADE (01133951) on the top of the box.

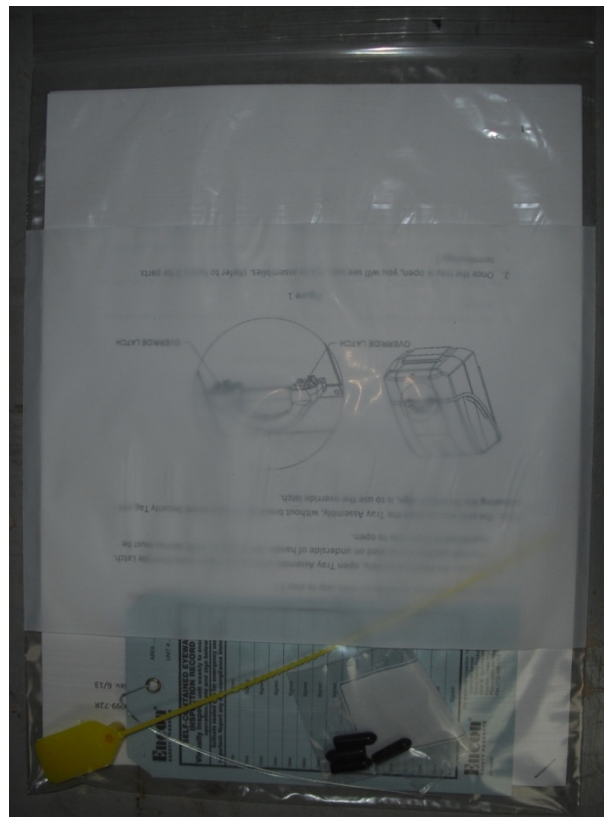


Fig. 5



6825 W. Sam Houston Pkwy. N
Houston, TX 77041
1-800-AT-ENCON / 1-800-283-6266
customerservice@enconsafety.com
<http://www.enconsafety.com>