


Doc No :01999928A Rev: A Page 1 of 4

MODESTY CURTAIN WITH ALARM

PRODUCT DESCRIPTION

A highly visible, water-resistant, PVC coated nylon curtain used to provide immediate privacy.

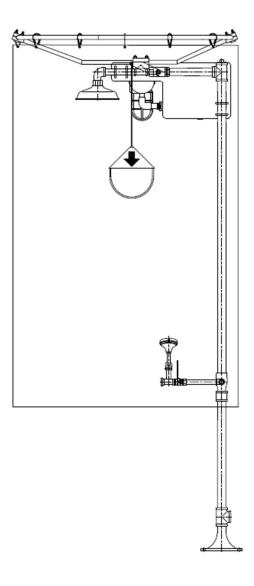

Model 01052149A





Doc No :01999928A Rev: A Page 2 of 4


1.0 ASSEMBLY AND INSTALLATION INSTRUCTIONS

Assembly


3. Clamp overhead bracket to horizontal piping of shower using mounting block and securing with U-bolts, hex nuts and washers (Fig 1).

NOTE: Do not tighten at this point of assembly.

4. Rough position mounting block to vertical shower piping using U-bolts, hex nuts and washers. **NOTE:** Do not tighten at this point of assembly.

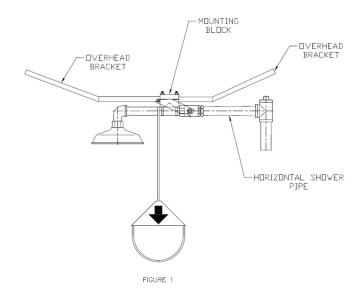

- Insert the two curtain rod halves into 4 connector halves. (Fig 2).
 NOTE: Small radius end of curtain rod should be positioned at vertical piping of shower.
- Assemble two connector halves to curtain rod with U-bolts, hex nuts, and washers.
 NOTE: Do not tighten at this point of assembly.

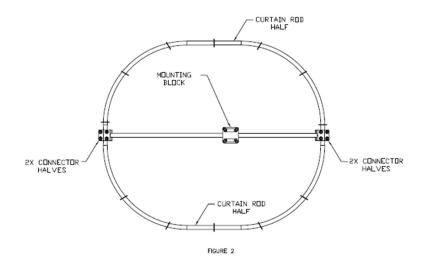







Doc No :01999928A Rev: B Page 3 of 4

Assembly cont.

- 6. Raise forward end of curtain rod /connector assembly to overhead bracket. Insert overhead bracket into connector half assembly (**Fig 3**).
- 7. Slide mounting blocks and overhead bracket to adjust height and level.
- 8. Tighten all hex nuts.

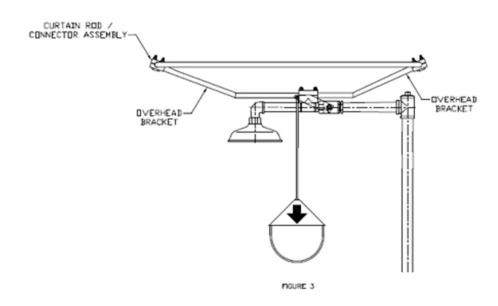

5. Attach shower curtain using included shower curtain hooks (Fig 4).

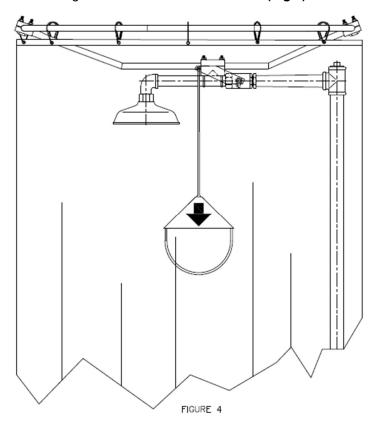





Doc No :01999928A Rev: B Page 4 of 4

2.0 TRAINING

All employees who might be exposed to hazardous material shall be instructed in the location and proper use of emergency shower and eye/facewash units. Experiences have shown that initial first-aid treatment for irritates should be to wash the eyes and face for 15 minutes prior to medical treatment. It is important to hold the eyelids open and roll the eyes so water will flow on all surfaces and in the folds surrounding the eyes.

PROPOSITION 65 WARNING:

This product can expose you to BPA, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

3.0 WARRANTY STATEMENT

ENCON HEREBY DISCLAIMS ALL WARRANTIES EXPRESSED OR IMPLIED INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS, EXCEPT AS HEREINAFTER PROVIDED.

Encon Safety Products warrants that for one year from the date of purchase of any Encon products, the product will be free of defects in materials and workmanship if properly used and cared for or cleaned under normal conditions in accordance with Encon's use and care instructions and properly installed, if applicable, in accordance with Encon's installation instructions. With respect to the product, Encon's only obligation and purchaser's exclusive remedy under this warranty is to repair or replace such product; provided that:

- 1. Encon is notified of the defect within one year of shipment, and
- 2. the product is determined by Encon to be defective. Encon requires proof of original ownership as proof of warranty coverage, and Encon must receive any claim under this Limited Warranty within one year of purchase of the product.

NOTWITHSTANDING ANYTHING TO THE CONTRARY CONTAINED HEREIN, ENCON SHALL NOT BE LIABLE FOR LOSS, DAMAGE, OR EXPENSE ARISING DIRECTLY OR INDIRECTLY AS A CONSEQUENCE OF USE OF THE EQUIPMENT WITH OTHER PRODUCTS OR FROM ANY OTHER CAUSE, INCLUDING ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR EXEMPLARY DAMAGES, EXCEPT FOR ENCON'S OBLIGATION TO REPAIR OR REPLACE DEFECTIVE PRODUCTS AS EXPRESSLY PROVIDED IN THIS STATEMENT.

Replacement parts purchased from Encon are warranted for one year following the shipment of such replacement part, or until the expiration of the warranty period for the product, whichever is less. No warranty is given in connection with products that are altered without Encon's expressed written consent. The same warranty limitations and the obligations of Encon as set out herein above shall apply to replacement parts.

Encon's total liability arising out of this warranty (including, but not limited to, warranty claims) regardless of forum and regardless of whether such action or claim is based on tort, contract or otherwise will not exceed the total purchase price of the product.

